





# 8HLRD / 8BLRD Retrofit



1. Check hole diameter in ceiling. Opening should measure a minimum of 8" dia.
2. Remove trunion from pan, retaining wing nuts. Feed trunion and flex through opening and lay on top of ceiling surface.

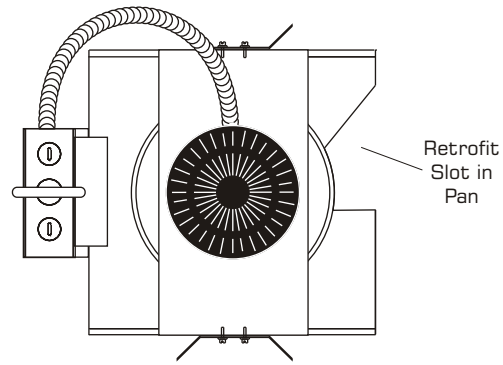

3. Insert fixture pan through opening as shown.
4. Work the j-box through the opening and rotate pan up into position with the drawn circular flange in the opening.

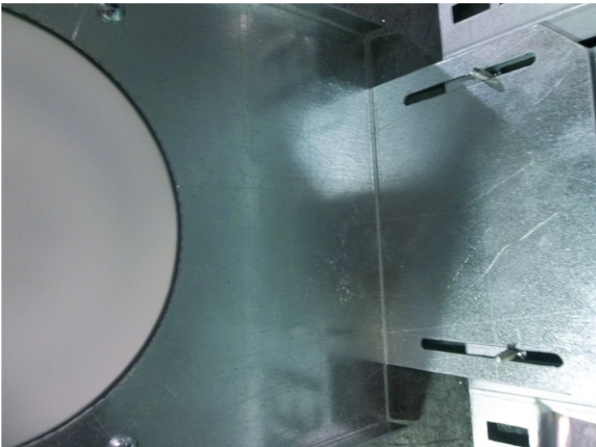

5. Place trunion in position with flex on the junction box side of the pan.
6. Engage the slots on one leg of the trunion onto the screws in the vertical side of the mounting pan.



7. Flex the opposite leg of the trunion inwards to clear the two screws in the mounting pan vertical side.
8. Secure trunion with wing nuts.

## TIPS

- Choose proper companion concealment ring to cover any excess opening in ceiling (more than 8 1/2" diameter).
- For 1/2" thick ceiling, the slots should be pushed all the way to the top. Adjust appropriately for thicker ceilings.



© 2013 Peachtree Lighting LLC

770-787-8490 • 770-787-8521 • [www.peachtreelighting.com](http://www.peachtreelighting.com)

-RETRO8